

CONGRATULATIONS ON PURCHASING AN EDEN TABLE, COAST TABLE OR BORA BORA SETTING FROM OUR NZ MADE EDEN OUTDOOR FURNITURE COLLECTION BY DANSKE MOBLER.

Thank you for choosing your table from our NZ made Eden outdoor furniture collection. The table is made from rosewood, which is machined and assembled in our Danske Mobler factory in Mt Eden, Auckland, using stainless steel screws/bolts and epoxy glue for all-weather strength. The table is finished with Woodland timber stain.

Rosewood is one of the finest timbers for outdoor use. Cracks, splits and twisting may appear in the timber, particularly on the end grain and to a lesser extent on the surface. This is a natural behaviour of wood suitable for outdoor use, occurring as the natural oils and minerals evaporate with exposure to the sun, wind and rain – it is not a manufacturing defect.

TO ENSURE YOUR TABLE REMAINS IN GOOD CONDITION & APPEARANCE, IT IS IMPORTANT TO ESTABLISH A REGULAR CLEANING & MAINTENANCE PROGRAMME.

Recoating of your outdoor table should take place before deterioration of the surface coating allows weathering of the timber substrate to take place. A patchy, thin, faded and uneven appearance indicates the need for recoating. If the table has high usage, is exposed to direct sun for prolonged periods, you may need to recoat earlier. If there are deep scratches or worn patches from day to day wear, the offending area should be recoated promptly.

To recoat the furniture we recommend **Woodland timber stain**, available from Danske Mobler stores and stockists.

WHY USE WOODLAND TIMBER STAIN INSTEAD OF A NORMAL STAIN?

Woodland stain is designed to repel moisture and protect your furniture from the effects of UV. It provides deep penetration into the wood while retaining the durability and protective qualities of more conventional products. Woodland dries to allow up to two coats to be applied in one day and will weather naturally without risk of cracking, blistering and peeling.

Recoating your outdoor furniture using Woodland timber stain:

- All surfaces must be clean, dry and free from dust, dirt, mould and all other contaminants.
- Any areas of mould must be treated with 30 seconds or suitable mould treatment in accordance with label instructions. Rinse thoroughly before proceeding.
- Weathered or greyed timber should be lightly sanded with 180 grit sandpaper, sanding with the grain.
- Upon completion of sanding, dust to remove all surface contamination.

Recoating your outdoor furniture using Woodland natural timber stain (continued):

- The best application technique is to stain 2–3 boards at a time continuing to a natural break such as a corner or end of board, working the stain into the timber with a brush.
- With a lint-free cloth, rag-off the residual stain. Leave to dry for 1–2 hours at 20 C.
- Apply a light second coat brushing with the grain, lay-off to give an even colour effect.
- Use water to clean stain from brush.
- A maintenance coat may be required annually, depending on the timber, exposure and environment, however normally every 2 – 3 years.

General precautions and additional care instructions:

- Do not apply if rain is expected within 24 hours or the temperature is below 10°C.
- Drying and appearance can be affected by application at low temperatures or high humidity.
- Always colour test first to ensure that your colour will give you the desired results on the actual timber you are coating.
- Ensure the stain is fully dry before using the table.
- When coating severely weathered timber, re coat with Woodland.

Remember, Woodland is designed to provide a natural look. It is a semi-transparent stain and any previous stain on the furniture will affect the finish achieved by recoating.

For Woodland technical support call 09 837 0897 or 021 800 522

